 
 



16

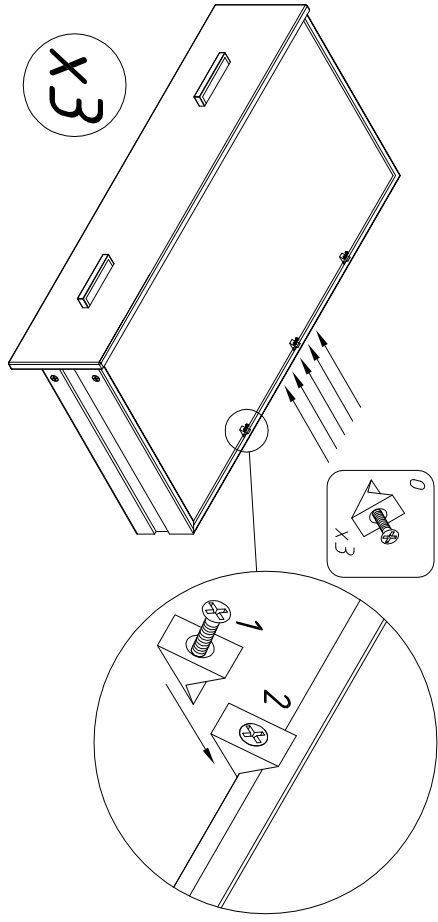

17

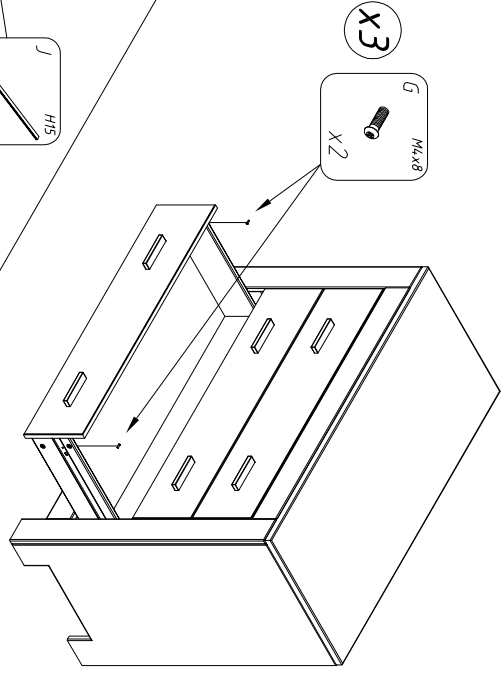



 
18

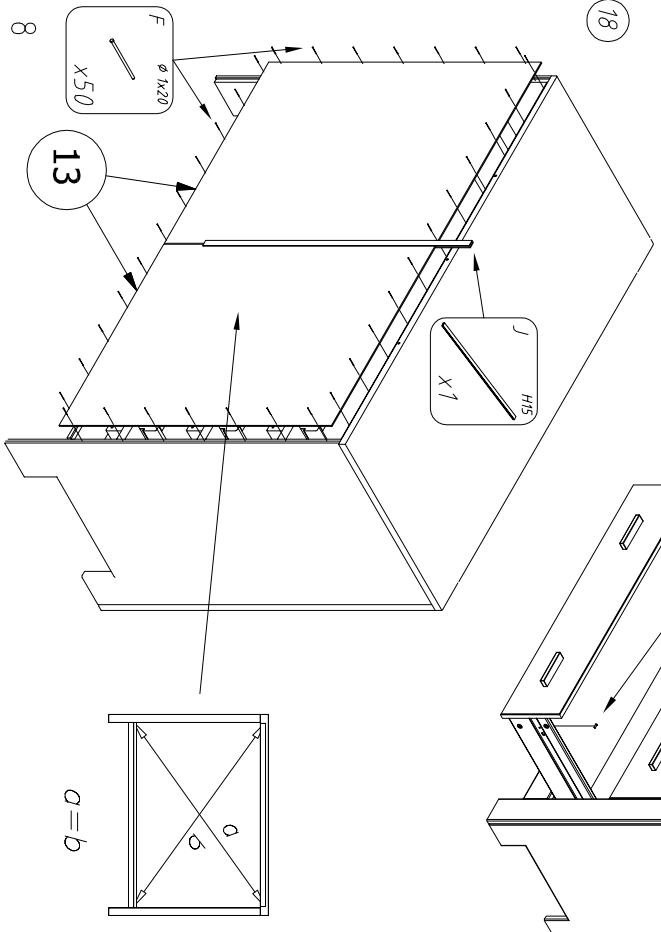

8

Instruction Manual

   Cobi
DRESSER
175311

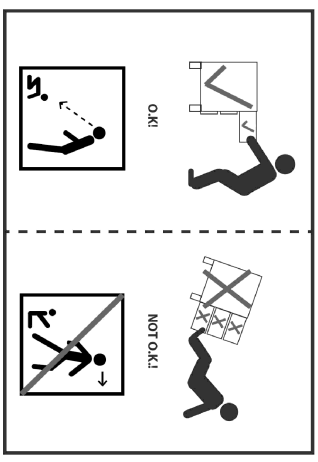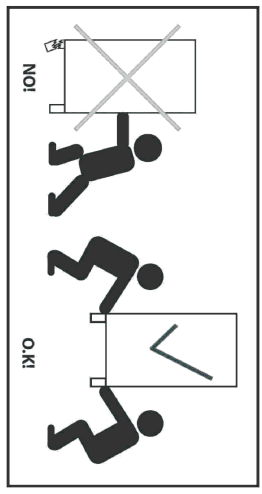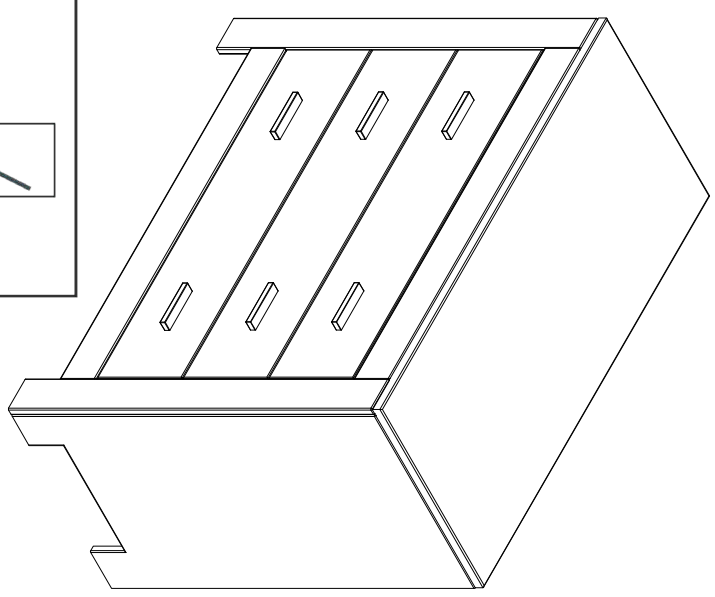






DISTRIBUTOR:








BOPITA

Edisonweg 3, 6662 NW Elst
The Netherlands
www.bopita.com


05.12.2013.

            - A ø 15x10 X4,0
- B M4x22 X4,0
- C ø 8x35 X2,6
- D ø 6x6 X6
- E ø 3,5x4,0 X1,8
- F ø 4x20 X5,0
- G M4x8 X6
- H ø 5,3x11,5 X1,2
- N 374x27 X6
- J H15 X1
- K M4x22 X1,2
- L ø 8x35 X4
- M ø 6x6 X1
- O ø 3,5x4,0 X9

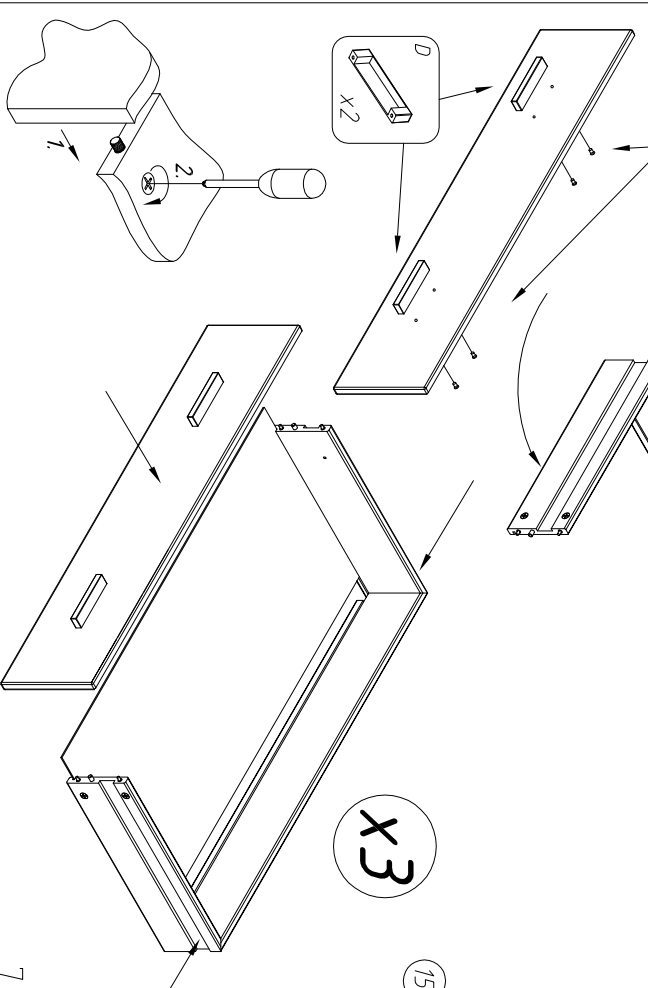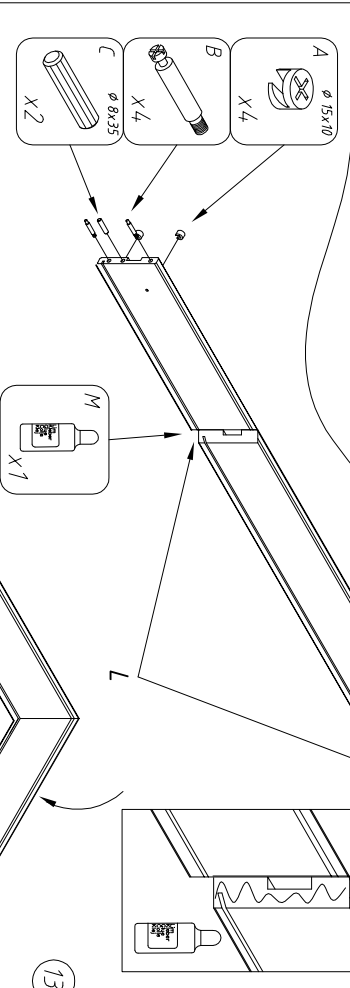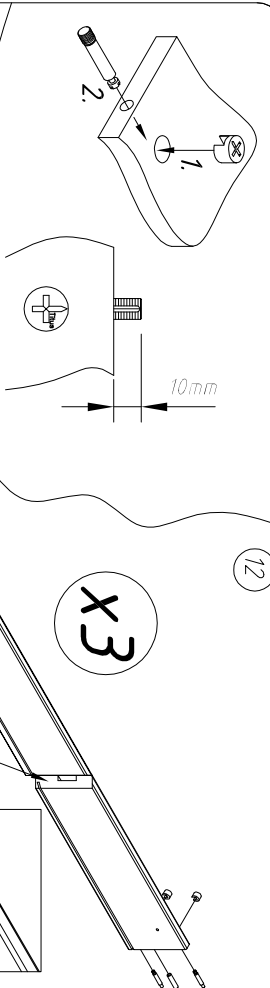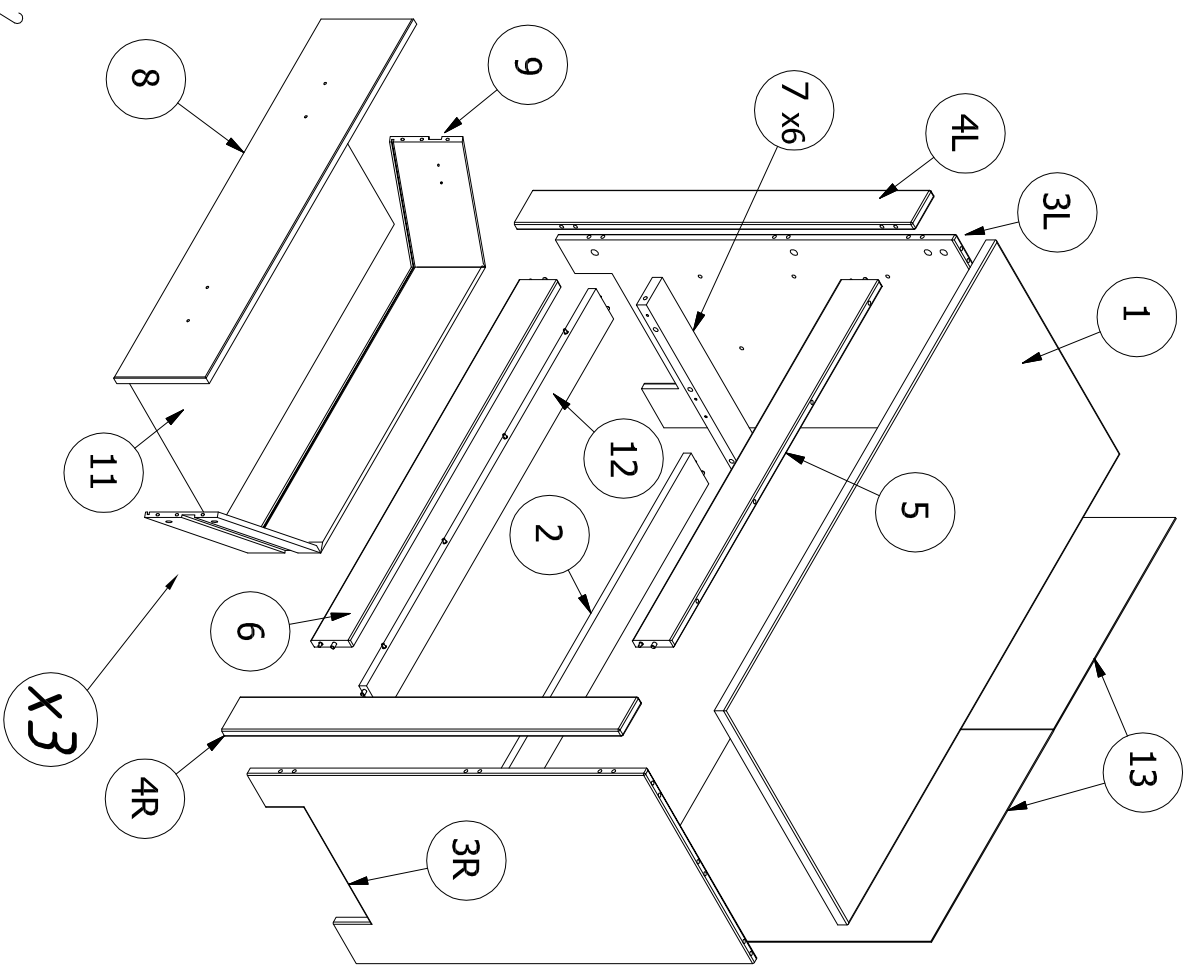


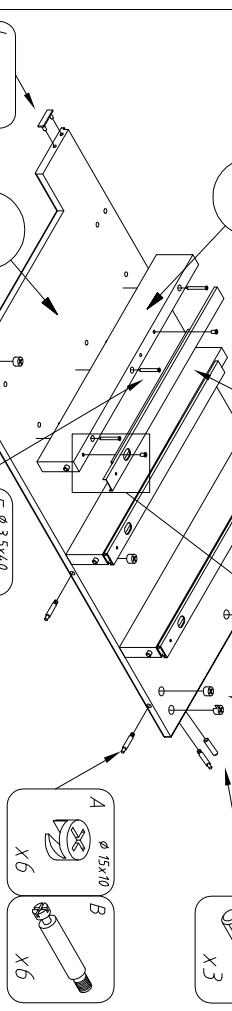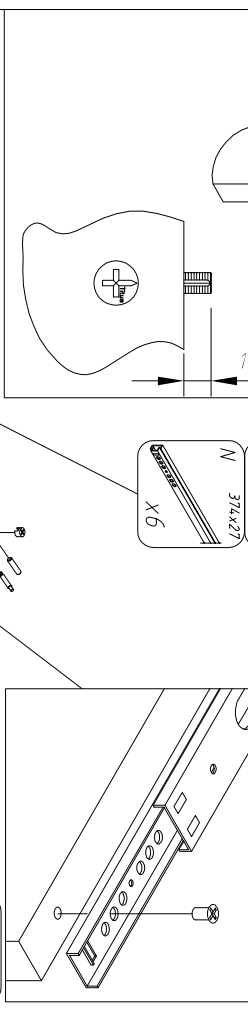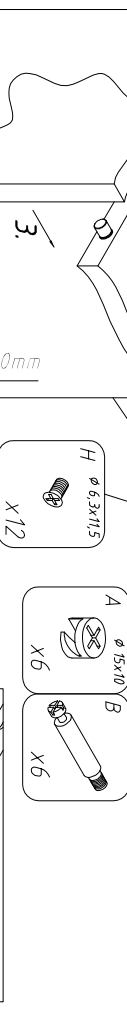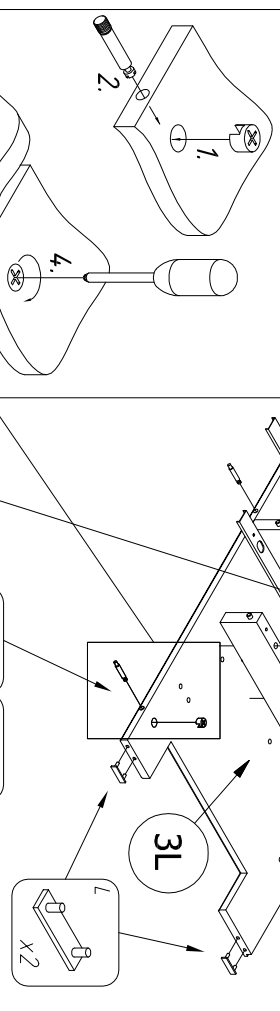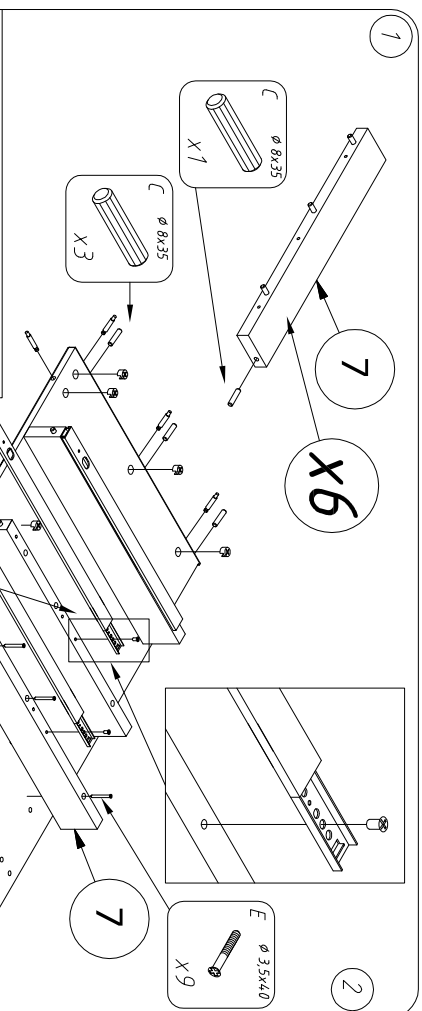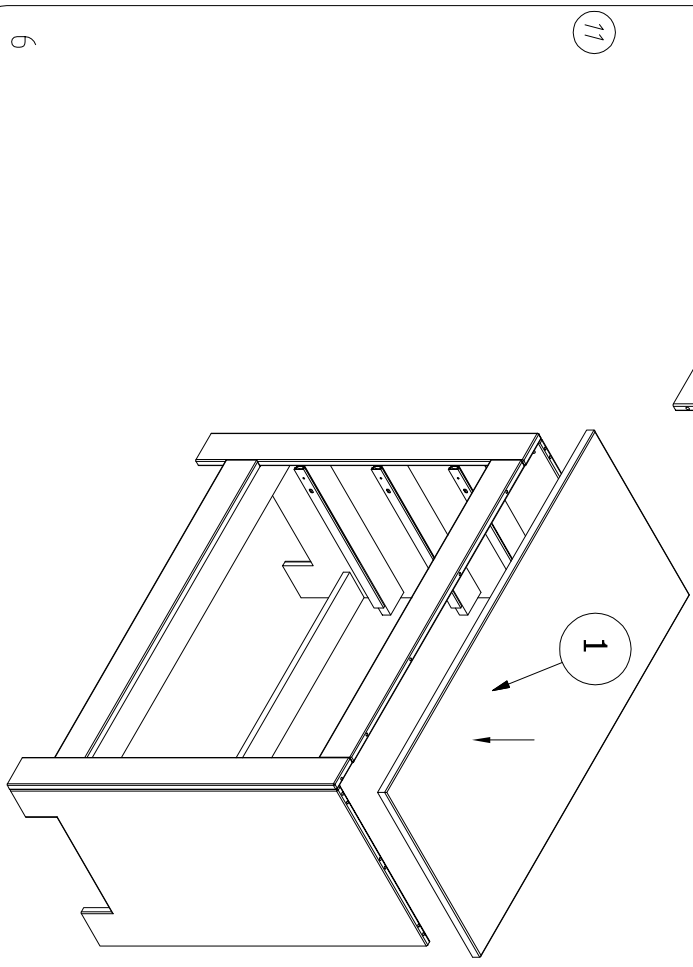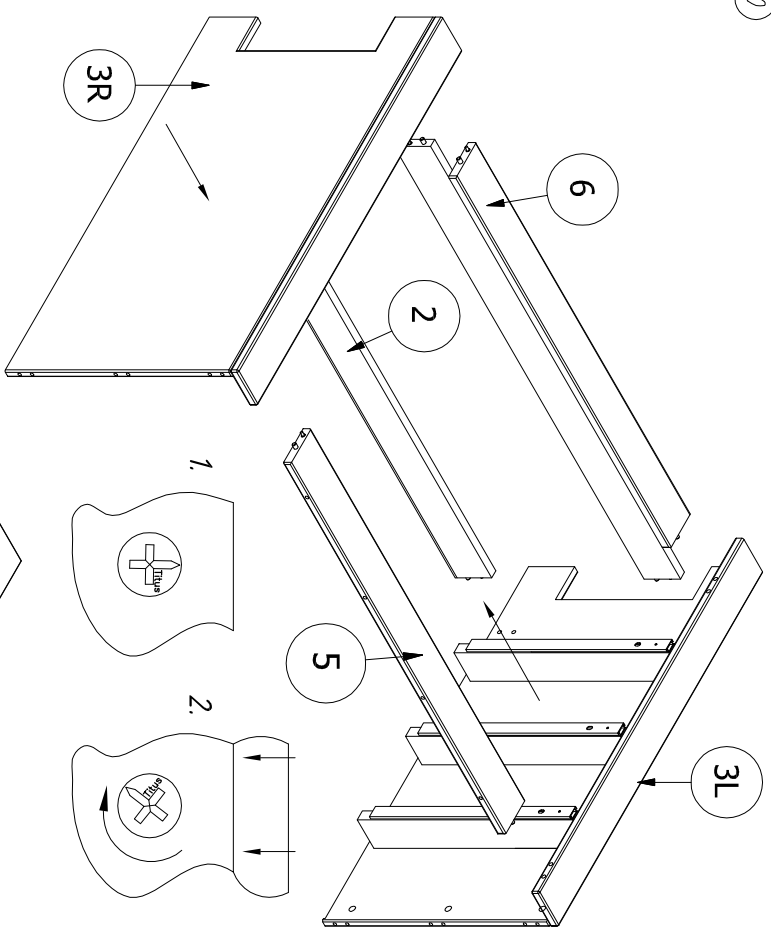


4

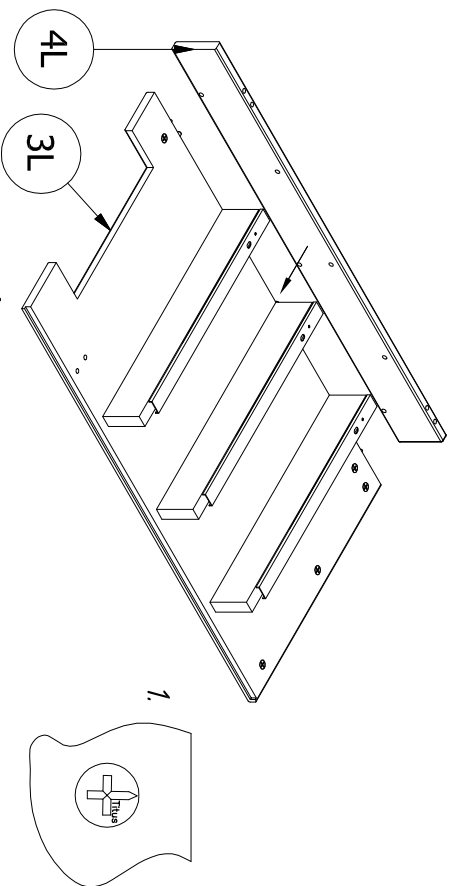 

5

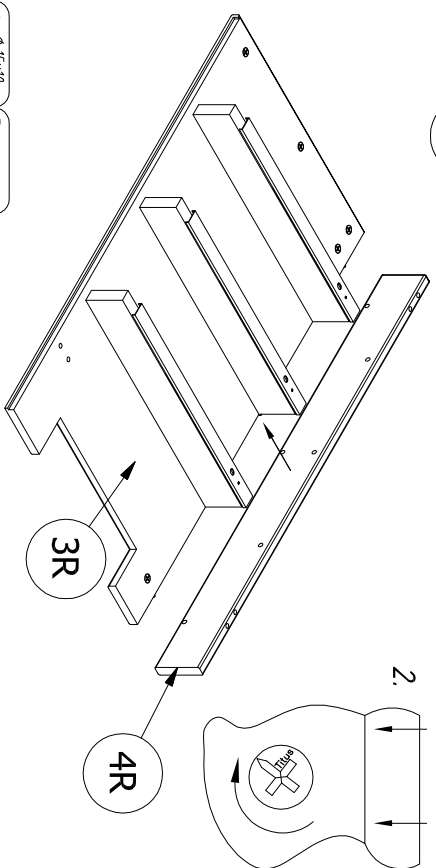 


6

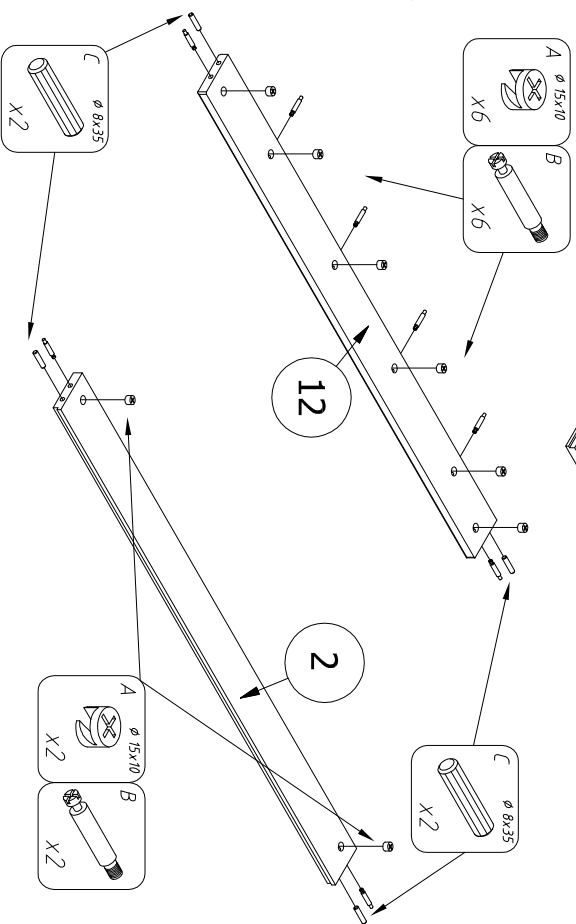 


4

 
7

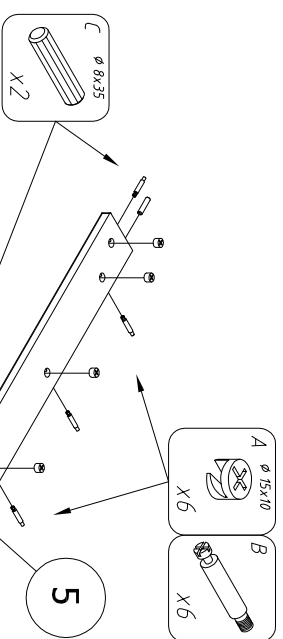

8

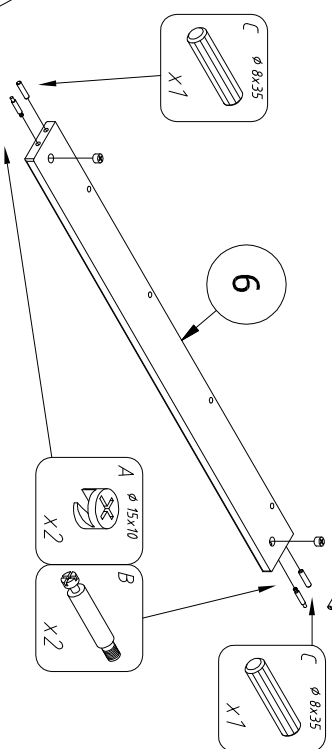 

9

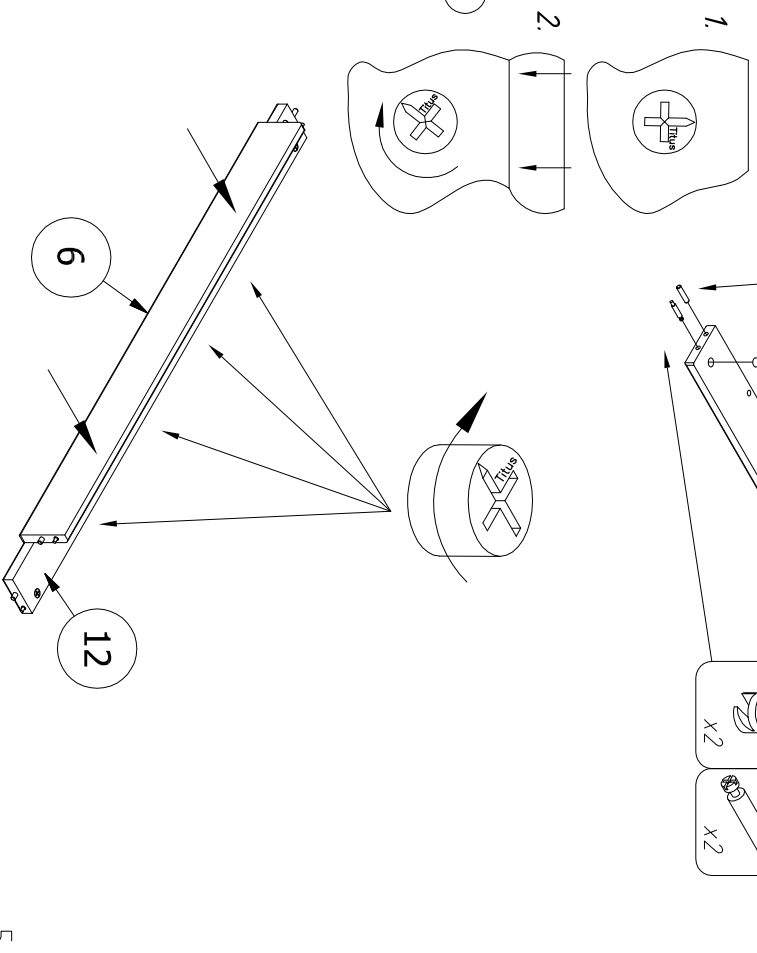 

5