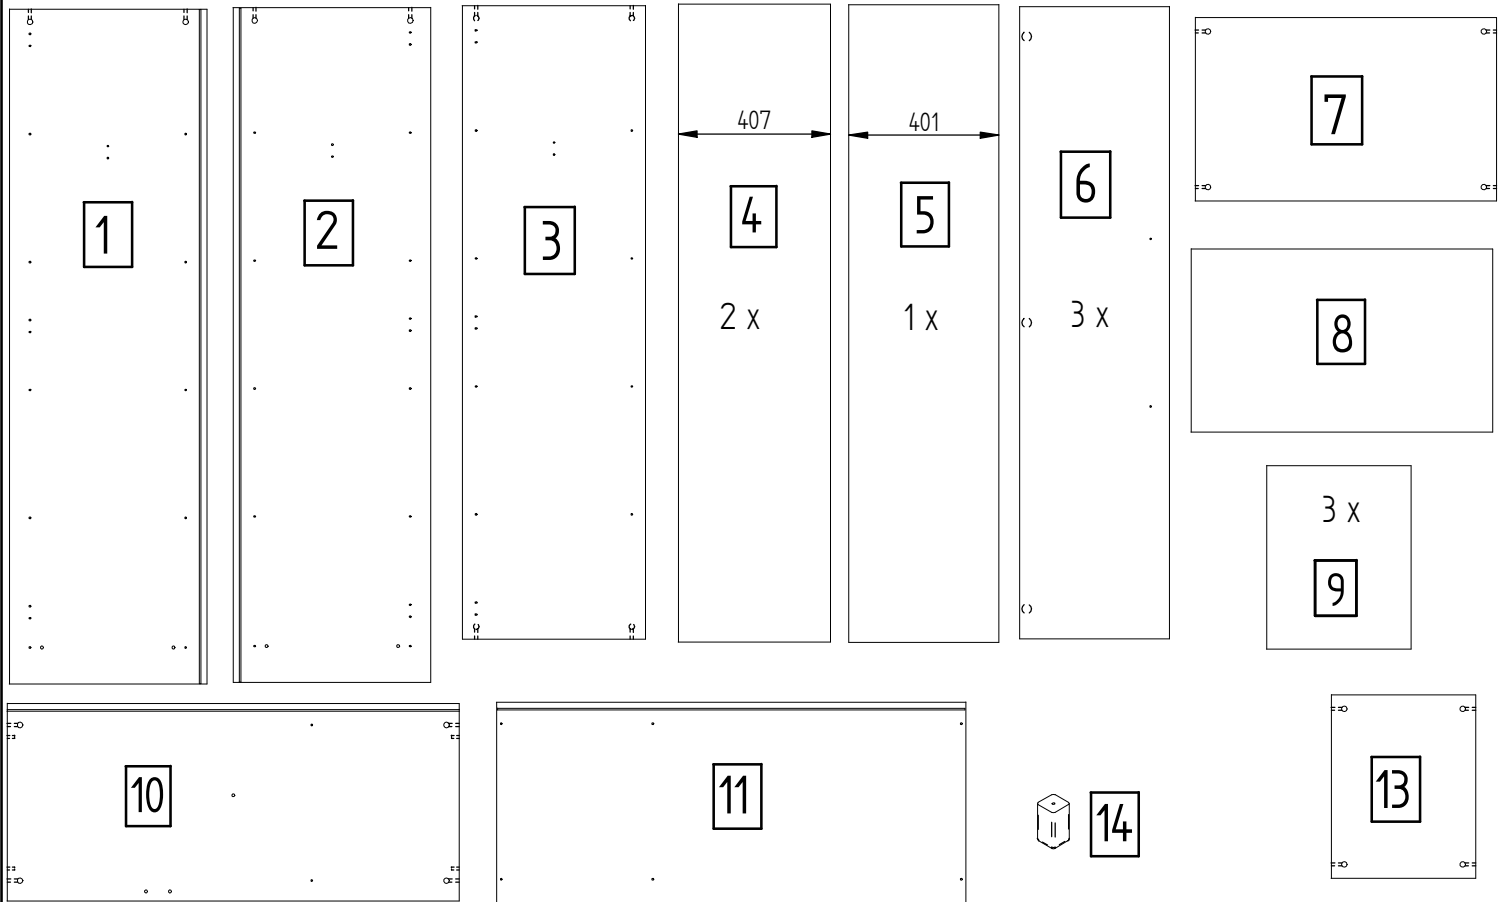


Schardt GmbH & Co. KG
 Am Riegel 15
 96268 Mitwitz
 Tel. 09266/9907-0
 Fax 09266/9907-77
 eMail: info@schardt.com
















Montageanleitung - Assembly instructions - Instructions de montage - Montageaanwijzing


Schrank / Wardrobe / Armoire / Kast


Eco Silber06 551



Inhalt - Contents - Contenu - Inhoud


A  16 x	B  15 ohne Rand 20 x	C  8 x 30 4 x
D  3 x 16 14 x	E  16 x	F  Höhe 7 mm 9 x
G  Kröpfung 18 mm 9 x	H  2 x	I  2 x
J  3 x	K  M4 x 20 6 x	L  6 x
M  7 x 50 1 x	N  800 mm 1 x	O  2 x 4 x


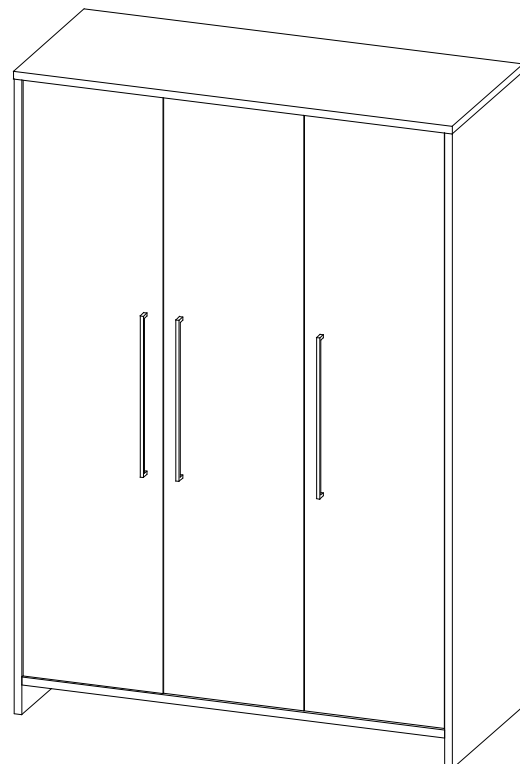


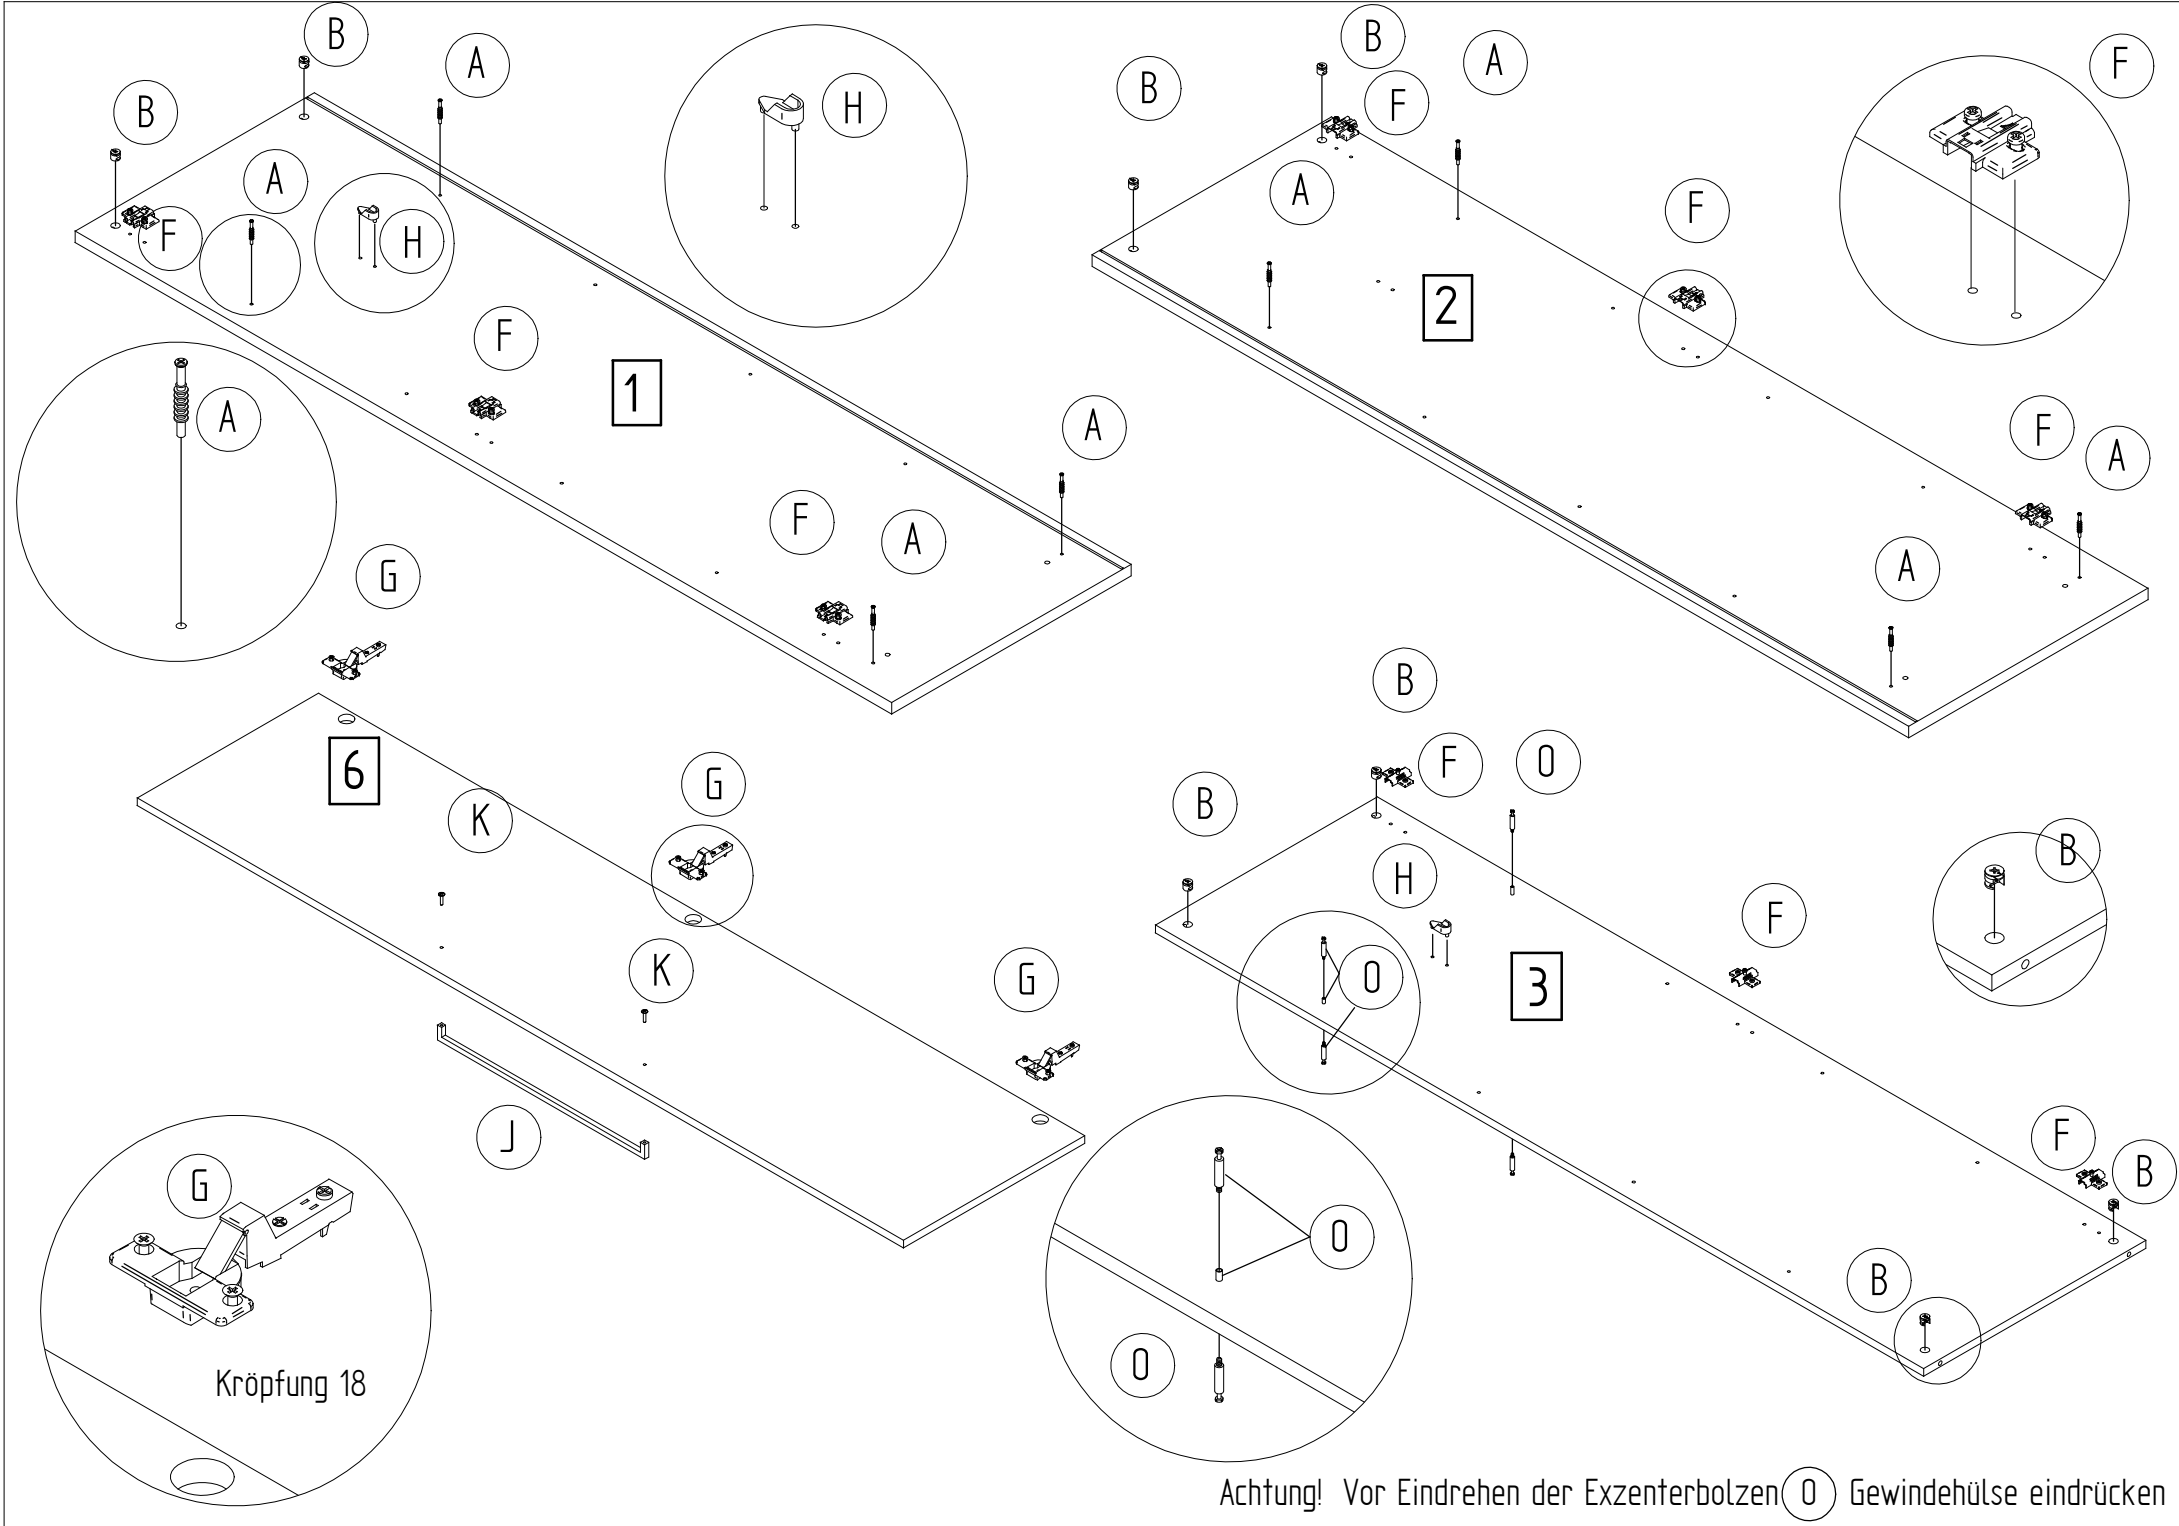

Achtung! Vor Eindrehen der Exzenterbolzen (O) Gewindehülse eindrücken

Vormontage:

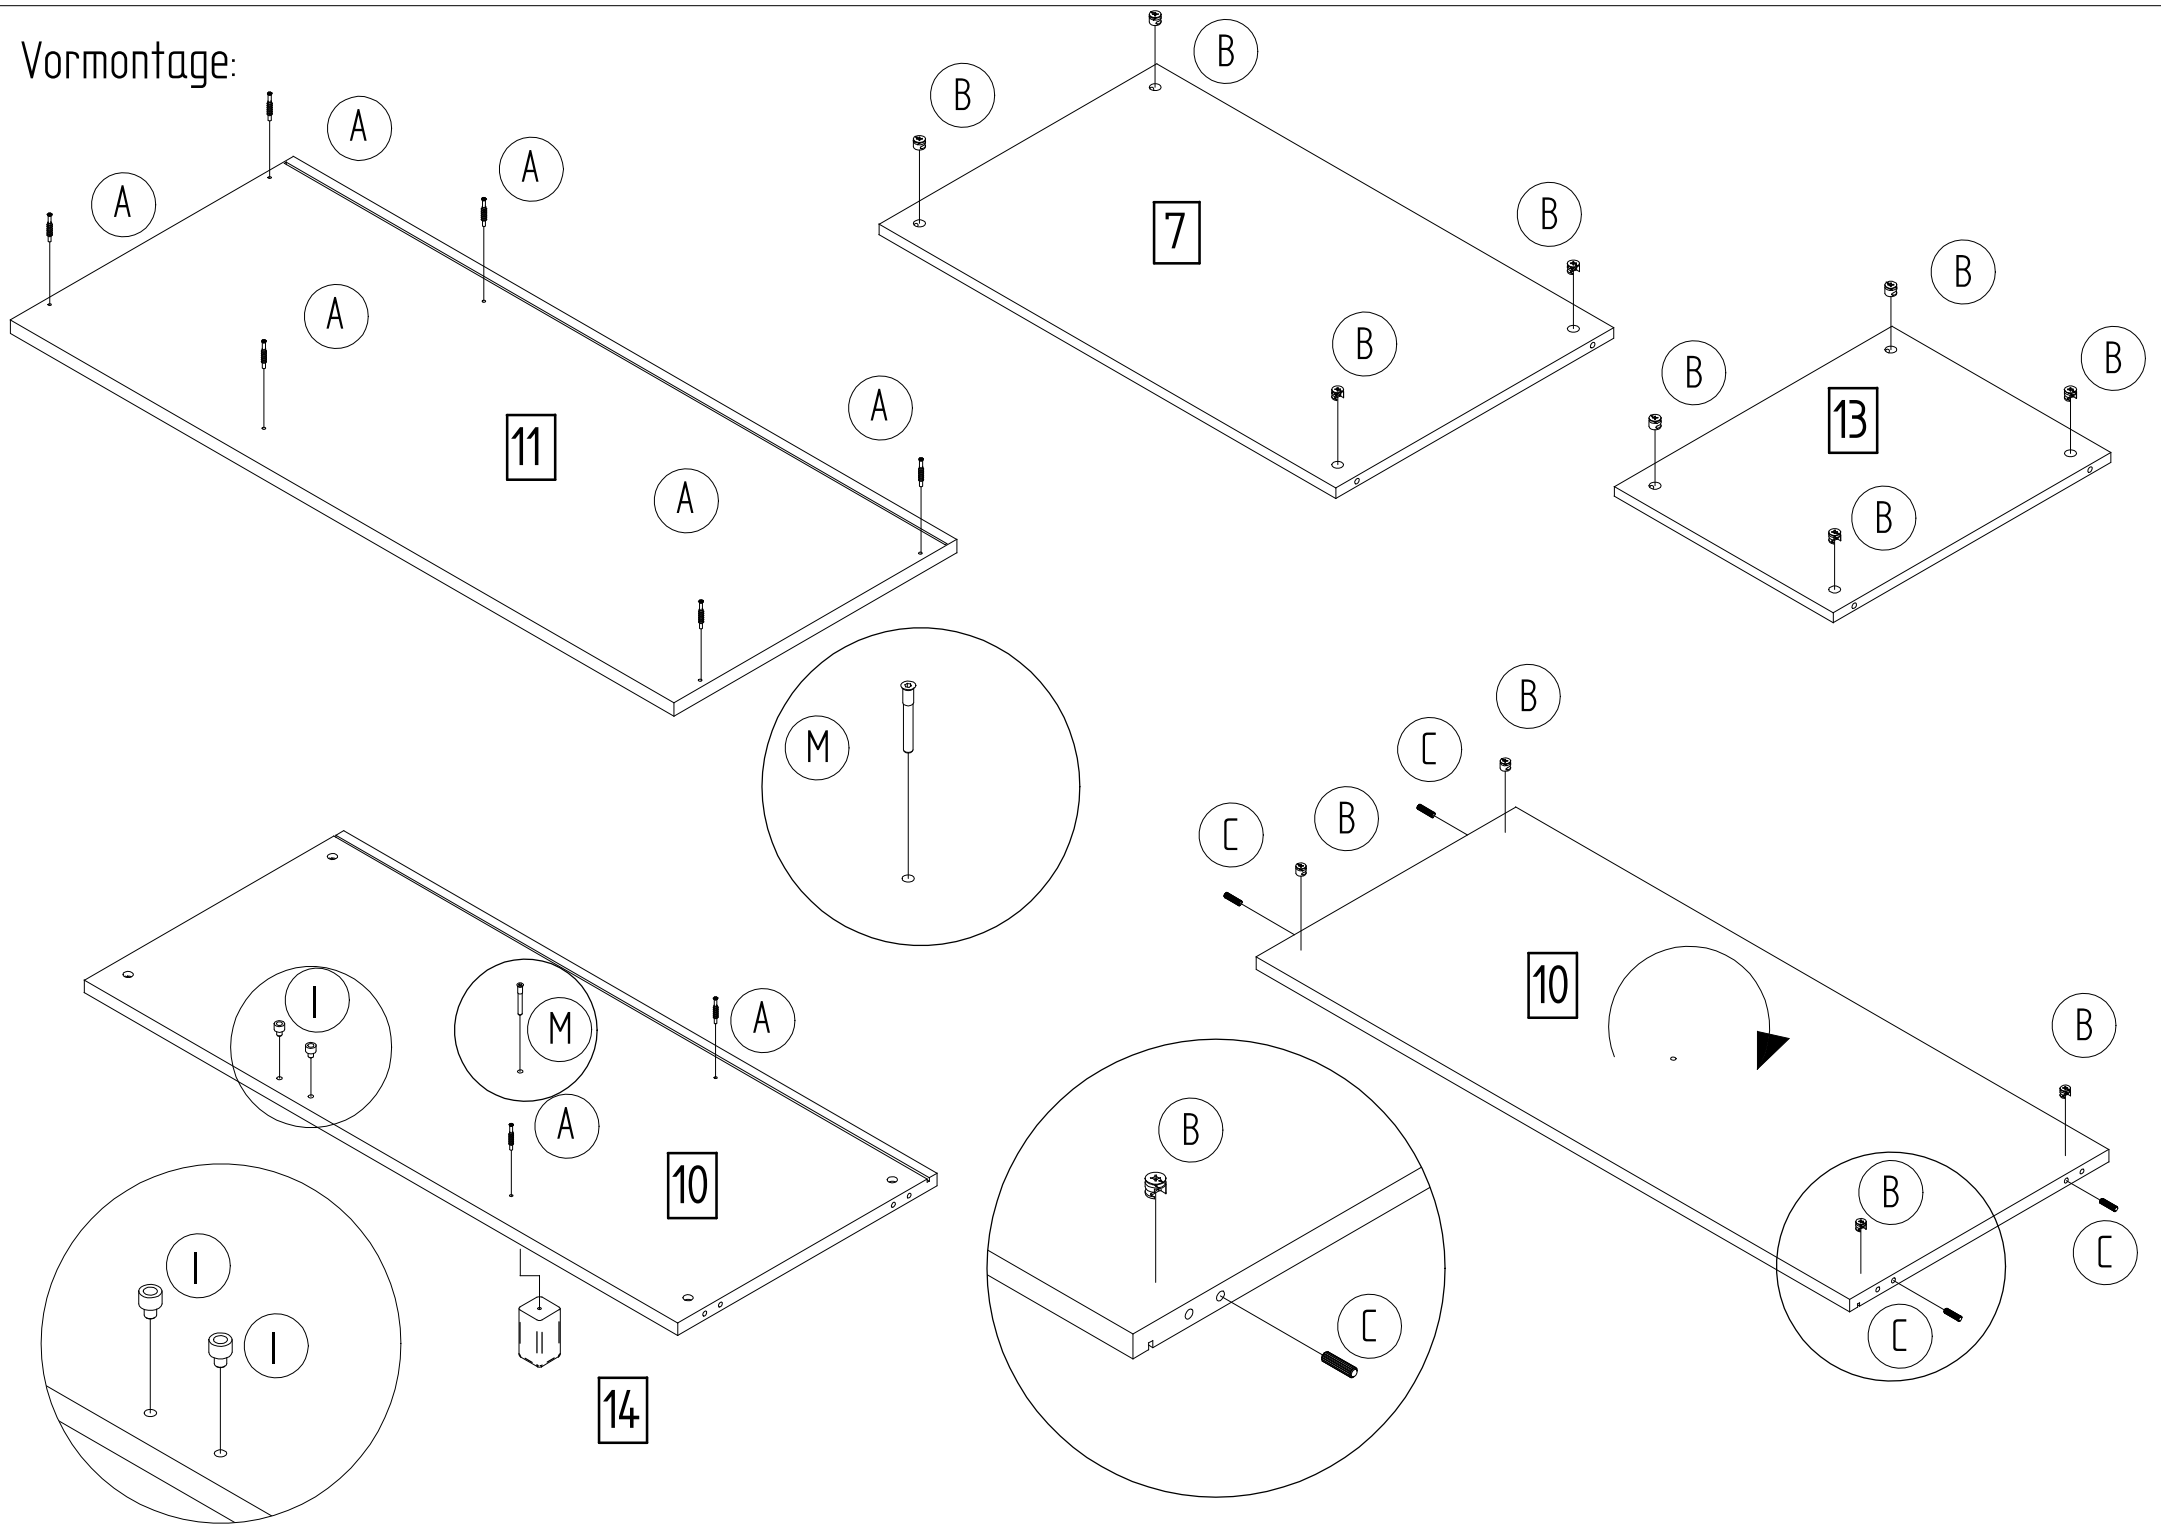

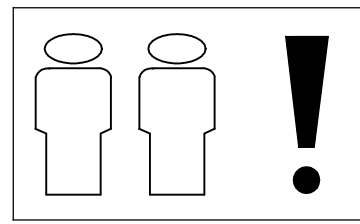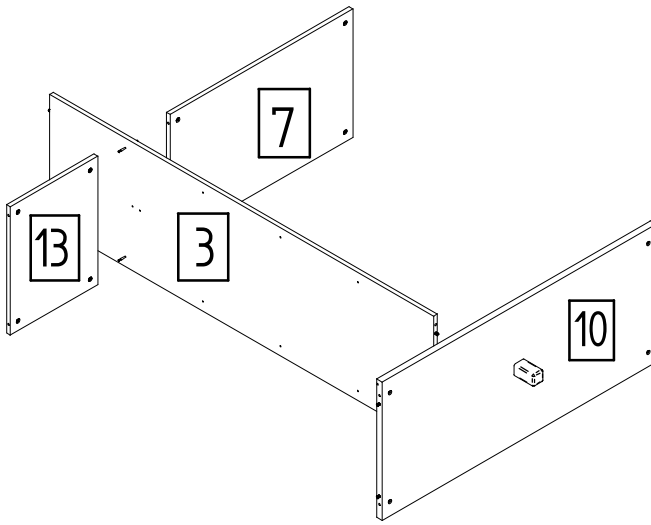

Zum Einschieben der Rückwände den Schrank aufrichten, zur weiteren Montage der Rückwandschrauben den Schrank wieder legen.

